

# INSTRUCTION MANUAL

 SAUNA ROOM

MODEL:YH-120JZ(JH)

- No advanced advice will be submit before we change our design and size.
- The pictures may be a little different from the real products.
- Our company keep the final explanation right.

## ATTENTION


1. Users should read through this manual before assembly and use.
2. The product must install a reliable earth line and electricity leak protection.
3. Users should install power supply according to actual condition.
4. Patients with hypertension or drunk are not permitted to use this products.
5. Adult guidance is necessary for children or under age to use sauna.
6. Corrosive liquid are not allowed to bring into the room.
7. Sauna room must not over working for long time. The heat pipe may damage of long time heating.
8. Our company would not take responsibility if the product is damaged but caused by violating the normal operating procedures.
9. When the product is discarded, please deal with it according to local law.

## TECHNICAL PARAMETERS


1. rated voltage: AC220V±10% 50Hz/60Hz
2. Power of Sauna heater: 3000W
3. Size: 1200X1200X1900mm




## OPERATION




### (1)Power supply

Press “” Button to start the function system, the temperature number tube reveals the room temperature; the time number tube reveals 80m. Press it again to close all functions..











### (2)Sauna function

1.Start the sauna function, and then press “” button and reveals temperature value in flicker, and press again to closing its function.

2.press “” to set temperature.and press “”and “” up and down,The default temperature is 45℃ , the range is 25℃-75℃.When the displayed temperature is arrived at the setting temperature, the sauna heater will stop work.

3. press “” to set the sauna time. and press “”and “” up and down,The default sauna time is 80min, the range is 1min-99min.When the displayed time is arrived at the setting time, the sauna heater will stop work.

### (3)FM/CD

Start the function system, and press “” button to start the Radio function, and then press “” button to adjust the channels upwards and downwards. Press “”set volume of the Radio,and press “”and “” up and down. Press “” button to start CD function, and then press “” set volume of the Radio,and press “”and “” up and down. Press “” button in the third time, will close all the function of the Radio system.



### (4)Ozone function

Close the system,Ozone function will auto start.

### (5)Top lamp


press “” to turn on the light,press again to turn off.

## SKETCH

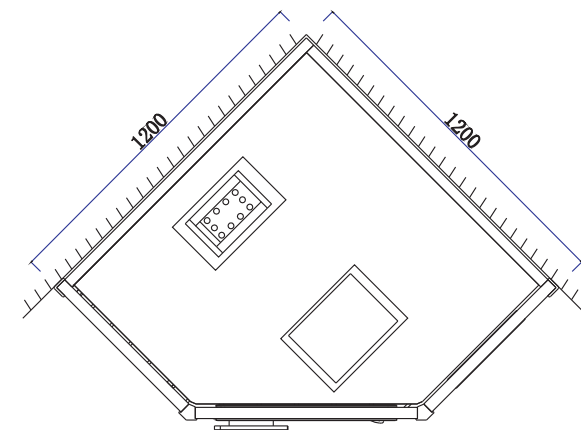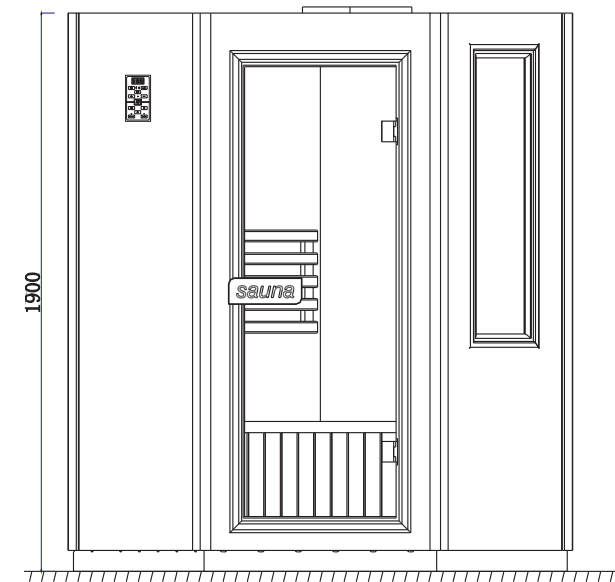


**Size:1200X1200X1900mm**

SPARE PART

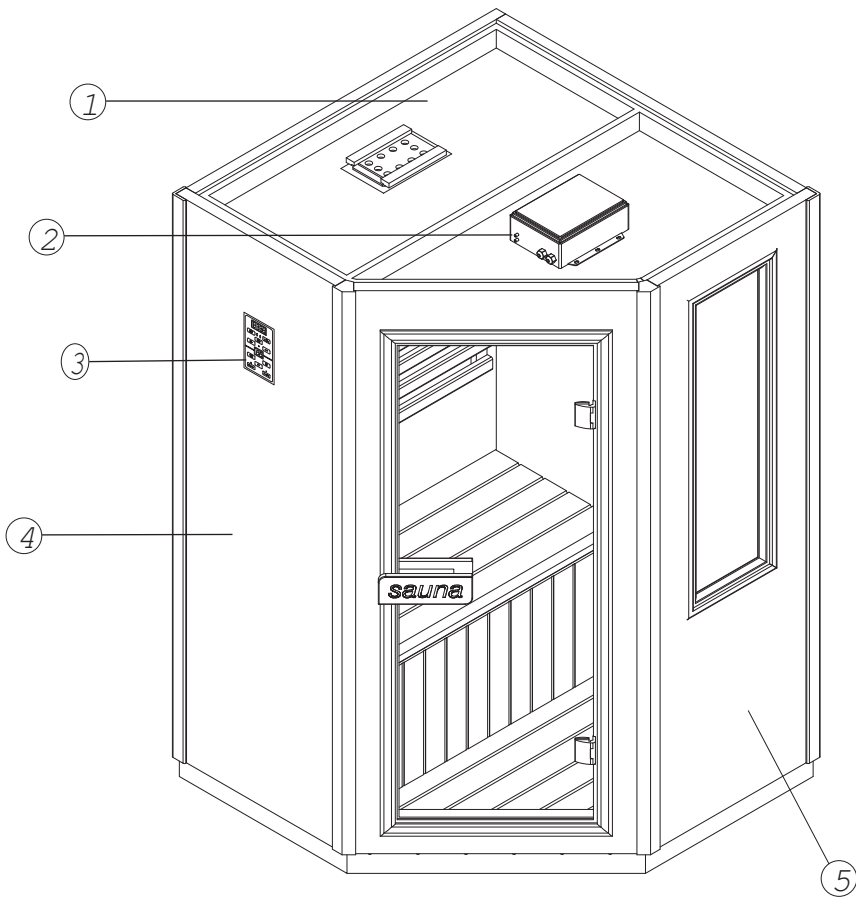

- 1.body roof
- 2.electricity box
- 3.control panel

- 4.body
- 5.Sauna heater

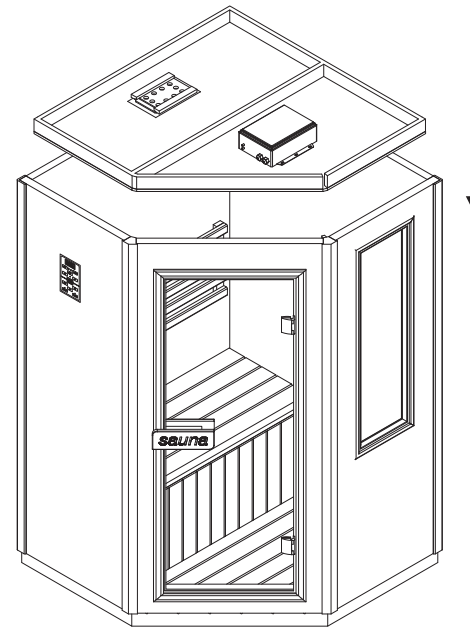



5.install the top.

D5

6.installation completed

D6

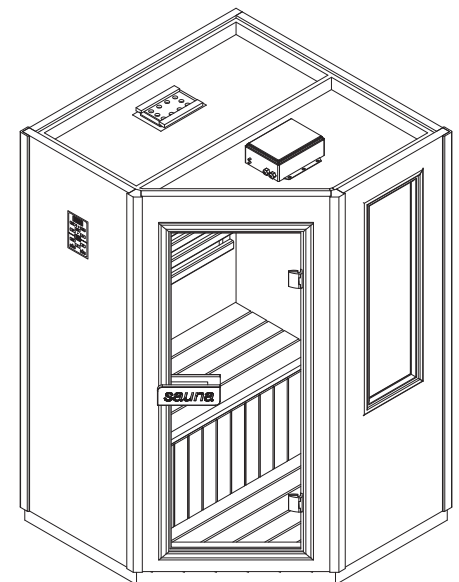


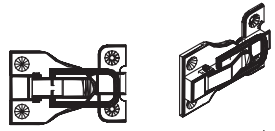


Copper clamp

3.install the back board to the base  
(Refer to Picture 3)



D3

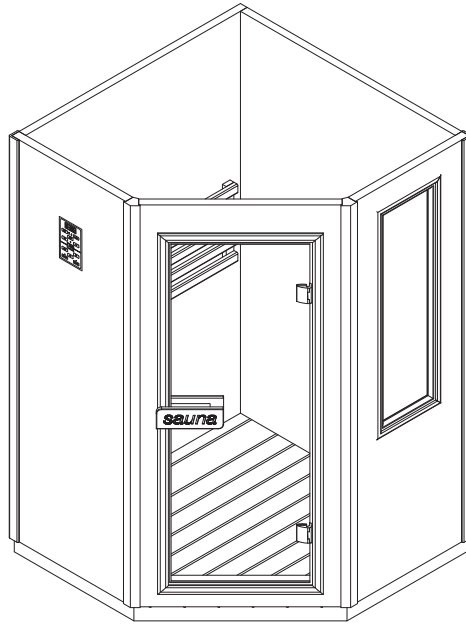

## CIRCUIT

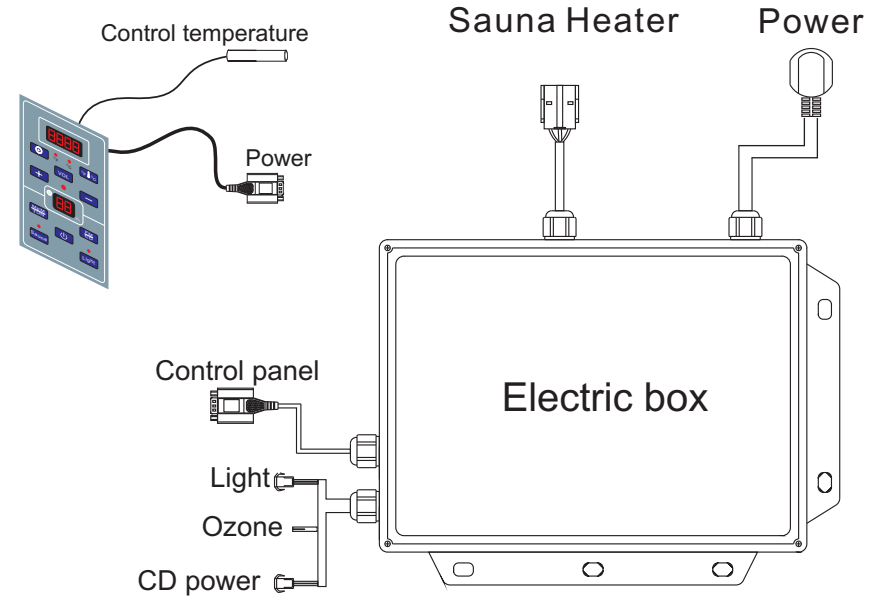


## CONTROL PANEL

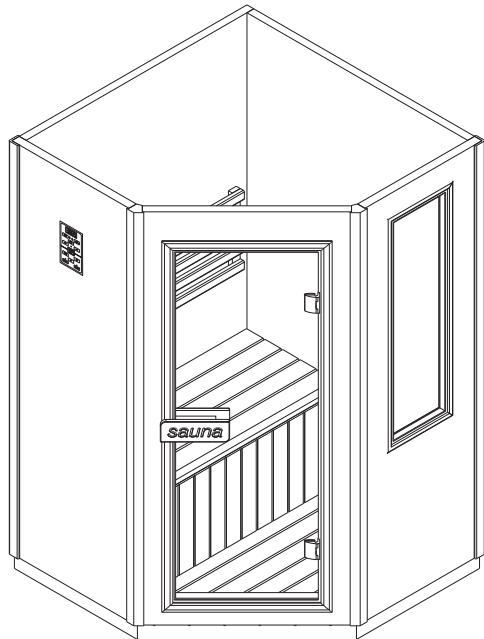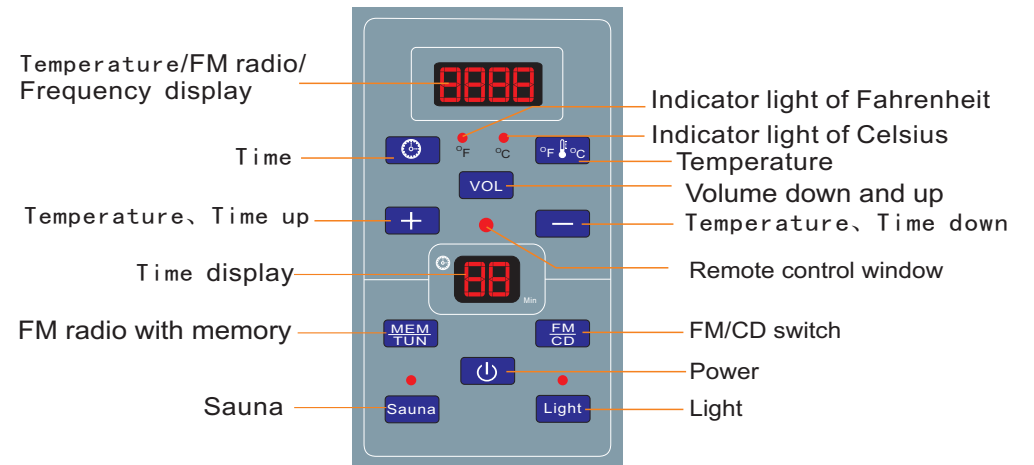

4.install the seat to the room  
(refer to Picture 4)


D4

# INSTALL CONNECTION

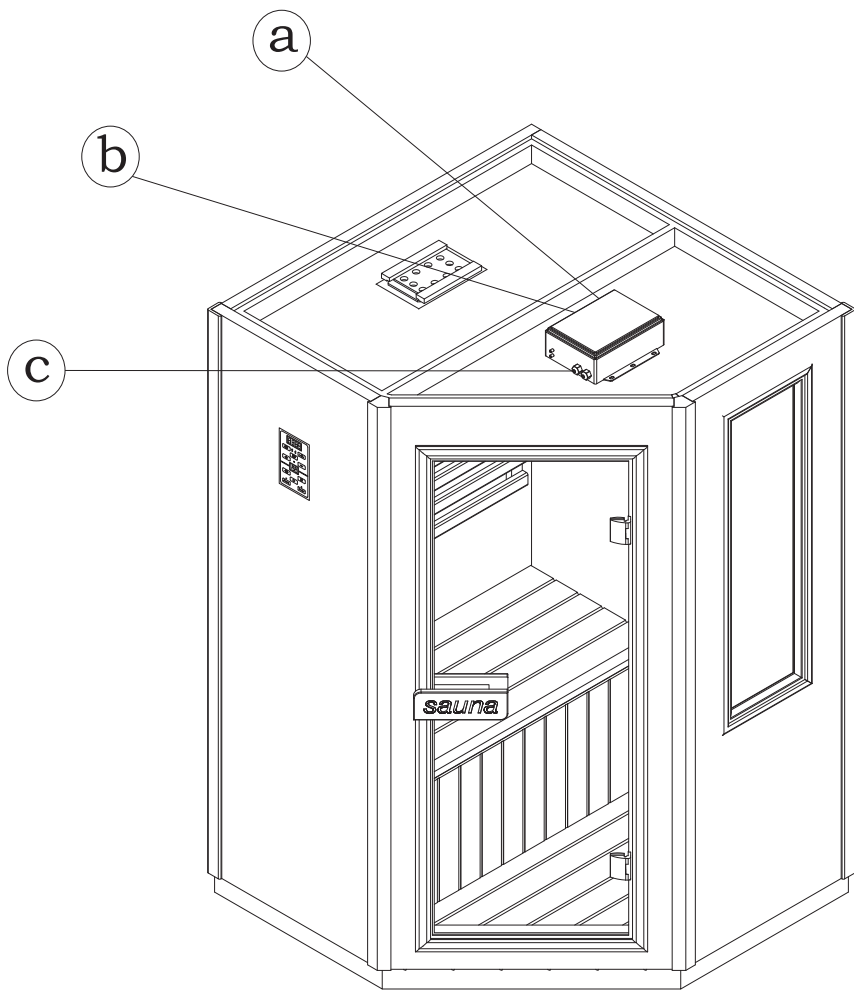


- a、 electrical connect
- b、 Sauna heater connect
- c、 control panel

# INSTALLATION DIAGRAM

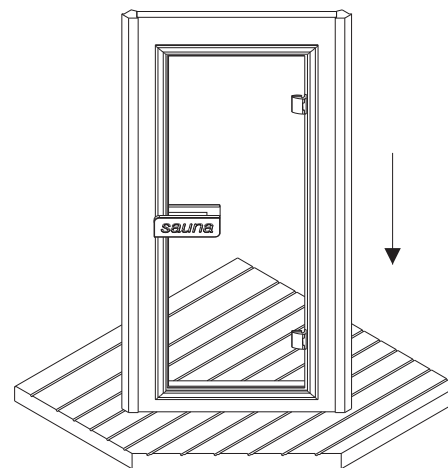

1.install front wall on base.(refer to Picture 1)

D1

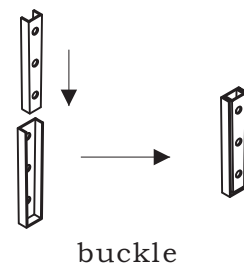

2.install both side of wood boards to the base.(refer to Picture 2)

D2

